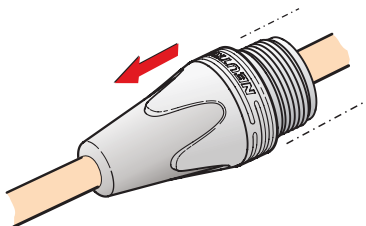
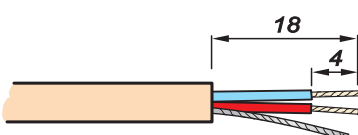


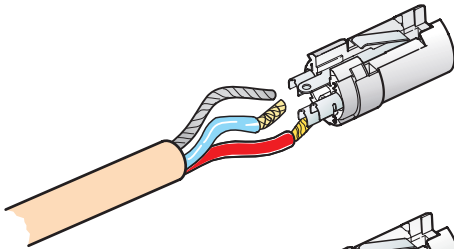


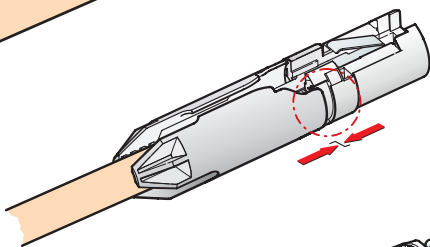
# ASSEMBLY INSTRUCTION

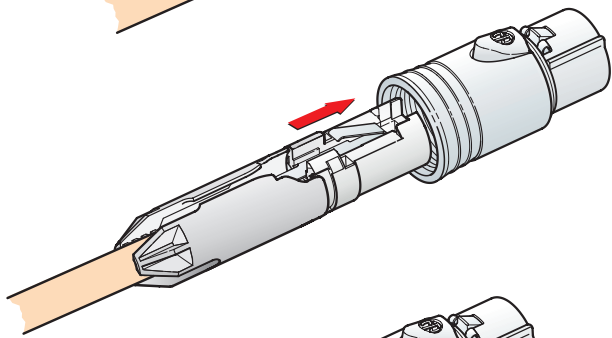
## NC\*FXX & NC\*MXX | XLR Cable Connector

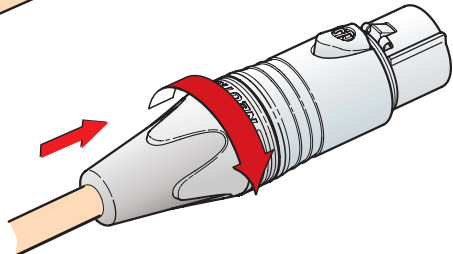
**(A)** 

**(B)** 

**(C)** 

**(D)** 

**(E)** 

**(F)** 

**(A)** Slide the boot onto the cable.

**(B)** Prepare cable as shown.

**(C)** Insert wires into the terminals and solder them.





**(D)** Put chuck onto the cable.  
**Attention: Pay attention to the guiding key.**

**(E)** Slide insert and chuck together into the housing.





**(F)** Finish the installation by turning the bushing onto the connector.

**ORDER OF ASSEMBLY**

**NC\*FXX**

			
bushing	chuck	insert	housing

**NC\*MXX**

			
--	---	---	---

<b>NEUTRIK AG</b> <b>NEUTRIK Zürich AG</b> <b>NEUTRIK USA Inc.</b> <b>NEUTRIK (UK) Ltd.</b>	<b>LI</b> <b>CH</b> <b>USA</b> <b>UK</b>	<b>T: +423 / 237 24 24</b> <b>T: +41 44 / 736 5010</b> <b>T: +1 732 / 901 9488</b> <b>T: +44 1983 / 811 441</b>	<b>F: +423 / 232 53 93</b> <b>F: +41 44 / 736 5011</b> <b>F: +1 732 / 901 9608</b> <b>F: +44 1983 / 811 439</b>	<b>NEUTRIK Vertriebs GmbH</b> <b>NEUTRIK France</b> <b>NEUTRIK Tokyo Ltd.</b> <b>NEUTRIK Hong Kong Ltd.</b>	<b>DE/NL/AT</b> <b>FR</b> <b>JP</b> <b>HK</b>	<b>T: +49 8131 / 280 890</b> <b>T: +33 1 / 4131 6750</b> <b>T: +81 3 / 3663 4733</b> <b>T: +852 / 2687 6055</b>	<b>F: +49 8131 / 280 830</b> <b>F: +33 1 / 4131 0511</b> <b>F: +81 3 / 3663 4796</b> <b>F: +852 / 2687 6052</b>
--	---	--	--	--	--	--	--

Draft. Nr.: BDA 158 / 3102M1381 | Update: 12..03.2008 | Data subject to change without prior notice. ©2008NEUTRIK®. ALL RIGHTS RESERVED.